


FTDI FT602 WinUSB Driver Install procedure.


1. Double click FT602WinUSBInstallation.exe.
2. Click on the 'extract' button to unpack the installer.

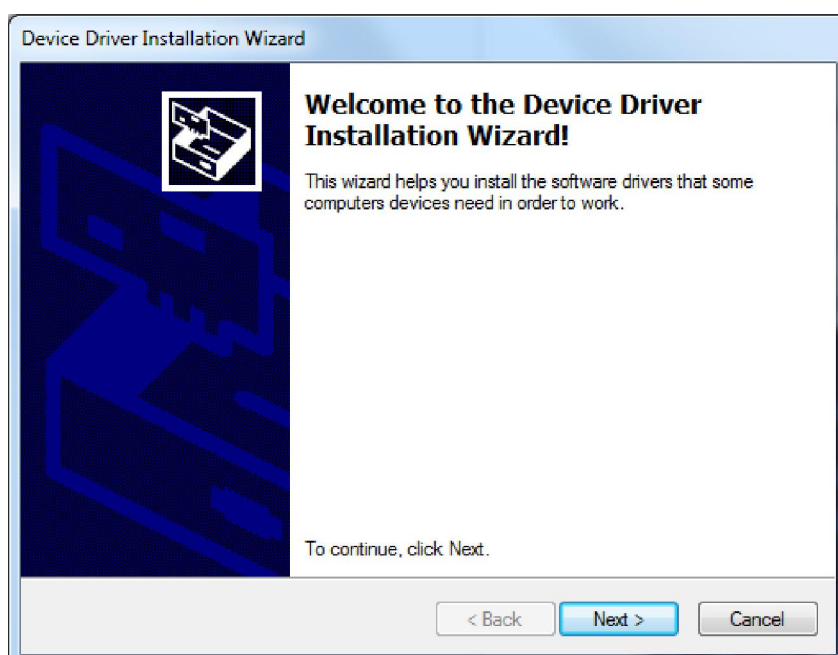

3. Click Next.



4. Select 'I accept this agreement' and click Next.

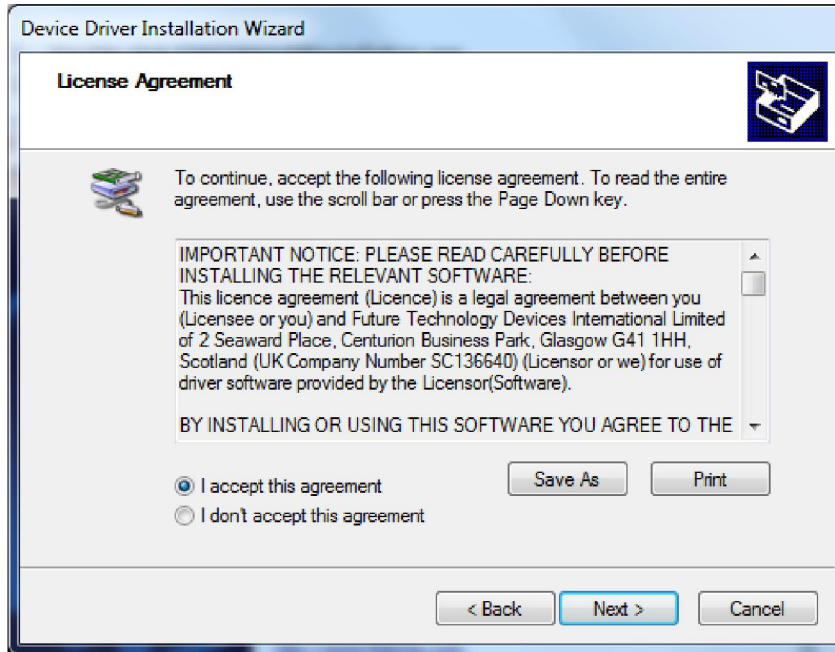

5. Click on Finish button. Installation is completed.

